

Studio Artist Easel

1. Rotate crossbars on back leg support so that notch is facing upwards (fig. A).
2. Lay center upright face down. Attach back leg support by sliding carriage bolts into center upright channel and tightening (fig. B).
3. Lay side legs face down. Attach back leg support to side legs with wingnuts (fig. C).
4. Stand up easel. Attach bottom canvas tray by sliding carriage bolt down side channel legs and tightening (fig. D).
5. Attach metal feet to frame holder and utility tray (fig. E-1), then slide into support channel and tighten (fig. E-2).
6. Rotate palette holders if needed (fig. F).

Applicable Products:

1450 Easel

