

# Curvette Instructions



fig. A

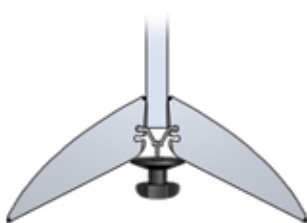


fig. B

1. For thin graphics (up to 1/4"), slide center piece into bottom slots (fig. A).  
For thick graphics (up to 1 1/4"), slide center piece into upper slots (fig. B).
2. Insert graphic and tighten knob to secure.