



ECO INFOBOARD (1 TIER)




•Insert the body legs into the box profiles of base flat on surface.

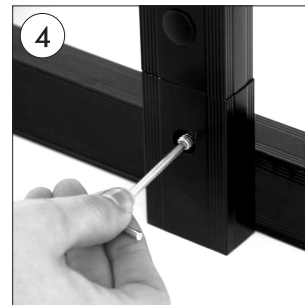

•Fix the base & body by allen key.

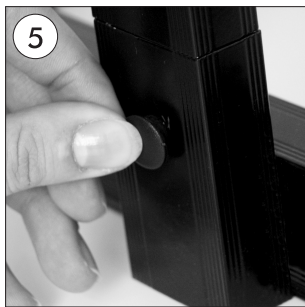

•Put the end caps to cover the screw holes.

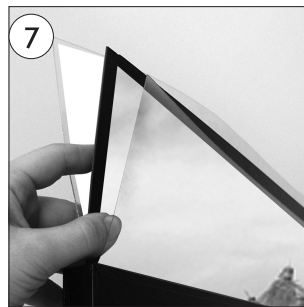

•Place posters against both sides of the black panel & place two anti-reflex covers on outer sides & slide them through the frame.

