Formulate 10' Straight - Kit 7

FMLT-WS10-07

Formulate[™] is a collection of sophisticated, ergonomically designed exhibit booths. Formulate combines state-of-the-art zipper pillowcase dye-sublimated fabric coverings with advanced lightweight aluminum structures to provide unique design, functionality, and style. The excellence of the Formulate line of displays, hanging structures and products is simply unmatched. Stretch fabric graphics are hand-sewn, durable and dry-cleanable.

features and benefits:

- State-of-the-art 30mm aluminum tube
- frame with snap button assembly
- Easy to store and ship
- Quick to set up

- Kit includes: one frame, one dye-sublimated zipper pillowcase graphic, stand-off pillowcase graphic ladder, and one wheeled molded OCL storage case
- Lifetime hardware warranty against manufacturer defects

dimensions:

Graphic
Total visual area: 114″w x 91.5″h
Pillowcase graphic ladder: 23.6"w x 97"h
Please be sure to include a 2" bleed around the perimeter.
Refer to related graphic template for
more information.
Visit: www.exhibitors-handbook.com/ graphic-templates

additional information:

Graphic material: Dye-sublimated zipper pillowcase fabric


Optional accessories: Lumina 8-50 watt halogen lighting, literature pocket, graphic header, larger freight cases




www.display-setup-animations.com




Parts Included – Backwall		
Part Label	Qty	Part Code
5MM STEEL BASE STYLE 2 FOR LINEAR	x2	LN114-S2
90 DEGREE ELBOW JOINT FOR 30MM TUBING	x2	TC-30-90
1114MM X 30MM TUBE	x4	WS10-T1
1270MM X 30MM TUBE	хб	WS10-T2
(2) 128MM TUBES SWAGED WITH PART TC-30-T	x1	WS10-T4
(2) 128MM TUBES SWAGED WITH PART TC-30-X	x1	WS10-T5
1114MM X 30MM TUBE WITH TC-30-T AND TC-30-90B	x2	WS10-T6
(2) 128MM TUBES SWAGED WITH PART TC-30-T	x1	WS10-T7

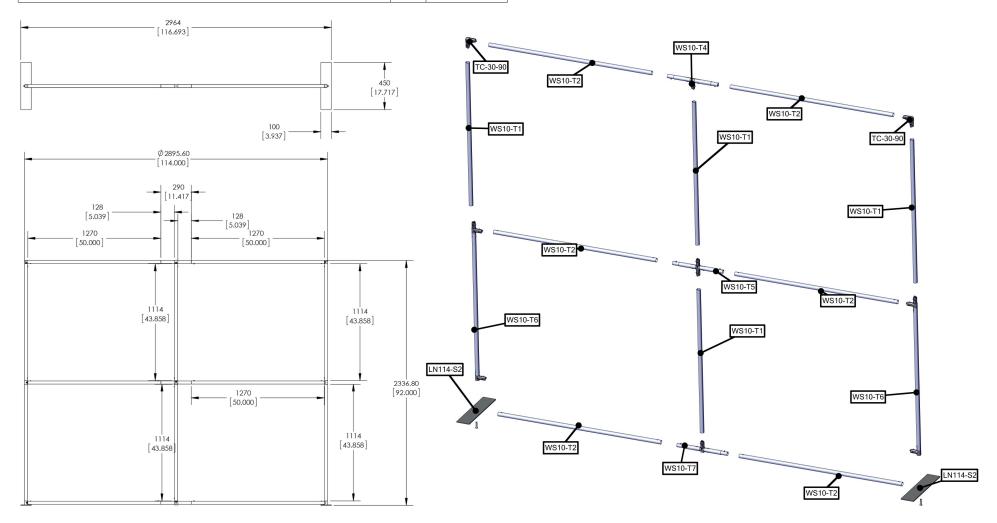


Parts Included – Ladder		
Part Label	Qty	Part Code
FABRIC PILLOWCASE GRAPHIC	x1	WL01-G
BACKWALL CONNECT WITH (2) TCH30 BACK TO BACK	x2	TCH30
535MM X 30MM TUBE WITH PART TC-30-T BOTH ENDS	x1	WL01-T1
535MM X 30MM TUBE WITH (2) TC-30-90T	x2	WL01-T2
R2000MM X 30MM TUBE (97MM ARC)	x4	WL01-T3

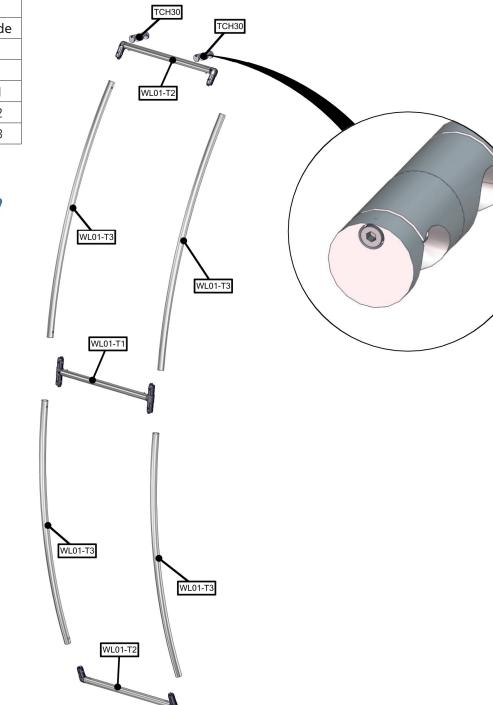


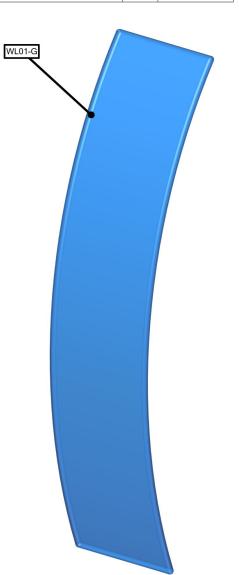


STEP 1: ASSEMBLE FRAME

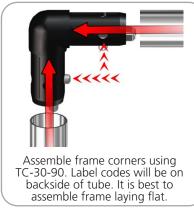

STEP 2: ATTACH FEET

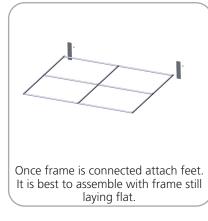

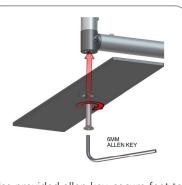


<<<


Connect sides of frame by lining


up holes with snap buttons.


Use provided allen key, secure feet to bottom of frame by screwing bolt.

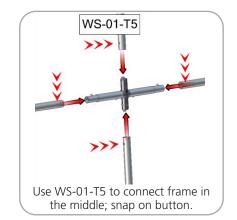


STEP 3: ATTACH GRAPHIC

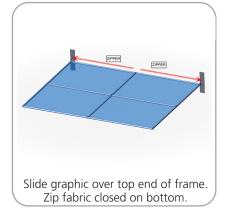


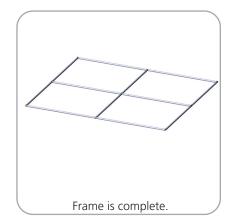

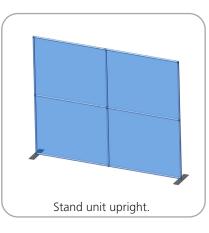


STEP 4: ASSEMBLE LADDER FRAME

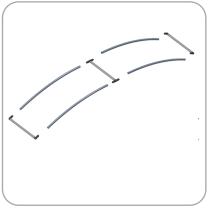

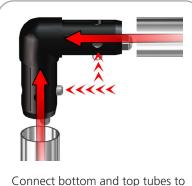


connect bottom and top tubes to side tubes following the labels.

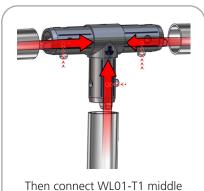



spreader to sides.



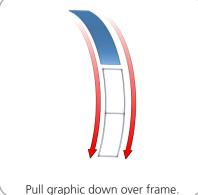


STEP 6: ATTACH TO BACKWALL WITH CLAMPS

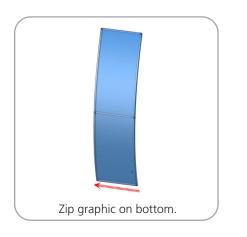

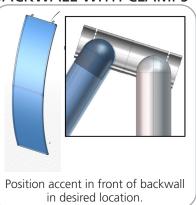



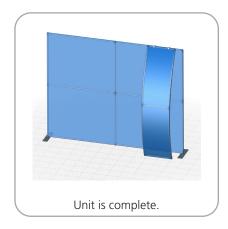

Check out these related products:

The Formulate line is a collection of stylish, ergonomically designed tabletop, 8ft, 10ft, 20ft exhibits, hanging structures, and display accessories. Formulate combines state-of-the-art zipper pillowcase dye-sublimated fabric coverings with a premium lightweight aluminum structure. Formulate is efficient, easy to assemble and disassemble, and offers remarkable style options and choices.

